

## PET-7200/ET-7200 Quick Start

V1.2, March 2018

### **Supported Products**

> ET-7200 Series

> PET-7200 Series

> ET-7200-UT Series

### **Technical Support**

PET-7200 / ET-7200 User Manual

http://ftp.icpdas.com/pub/cd/6000cd/napdos/et7000\_et7200/document/

### What's in the Box?





PET-7200/ET-7200 Module

**Quick Start** 

## Factory Default Settings

Network Connection	Default	Authentication	Default
IP Address:	192.168.255.1	User name:	Admin
Subnet Mask:	255.255.0.0	Password:	Admin
Gateway:	192.168.0.1		

# **2** Connecting to Network, Computer and Power





### ΡοΕ



# **3-1** Assigning a Valid IP Address - Method 1

1) Install eSearch from

http://ftp.icpdas.com/pub/cd/6000cd/napdos/software/esearch/

2) Launch eSearch and click "Search Server"

🥩 eSearc	h Utility [ v1.1.1	2, Dec.02, 2015 ]					×
<u>File S</u> erv	er <u>T</u> ools						
Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address	DHCP	
							>
<b>44</b>	Search S	erver	(UDP)	Web Exit			
							- //
		2P					

#### 3) Double-click the name for your module on the list

a eSearch Utility [ v1.1.12, Dec.02, 2015 ]						
<u>F</u> ile <u>S</u> erver <u>T</u> ools						
Name	Alias	IP Address	Sub-net Mask	Gateway	MAC /	
ET-7242/PET-7242	N/A M	192.168.255.1	255.255.0.0	192.168.0.1	00:0	

#### 4) Enter the network configuration and click "OK"

Configure Server (UDP)					
Server Name : ET-7242/PET-7242					
DHCP: 0: OFF	Sub-net Mask : 255.255.0.0	Alias:			
IP Address : 192.168.255.1	Gateway : 192.168.0.1	MAC: 00:0d:e0:64:f3:7b			
Warning!! Contact your Network Administrator to get correct configuration before any changing!					

#### 5) Repeat Step 2. to search the module again

To make sure your modifications take effect.

# **3-2** Assigning a Valid IP Address - Method 2

#### 1) Set the IP configuration on your computer

The ET-7200 module comes with the default IP address of 192.168.255.1, you must chose an IP address for the computer in the range of 192.168.255.2 – 192.168.255.253 that is not in use.

2) Launch your web browser to go to the ET-7200 web interface Enter the factory default IP address **192.168.255.1** for the

ET-7200 as the URL in browser and press Enter.



#### 3) Fill out the User name and Password

Fill out the factory default user name and password "**Admin**" and then click "**OK**".

#### 4) Assign a valid IP address for your ET-7200 module

- 1. Click "Configuration"
- 2. Click "Network Settings" in the sub-menu
- 3. Enter a valid IP address for your ET-7200 module.
- 4. Click the "SUBMIT" button.

ET-7000/PET ← → C ⊂ ICP D http://www Overview Configur a	-7000 Web pag x 192.168.255.1 AS w.icpdas.com	Γ-704		
Overview	Ethernet Configur	ation		
Configuration –				
Notwork Cottinge	IP address	Subnet mask	Gateway	
Network bettings	192.168.255.1	255.255.0.0	192.168.0.1	
Module I/O Settings	DHCP			
	🔍 Enabled 🔎 Disabled			
Authentication +				
Wob UMI +				

5) Restore the original IP address to your computer

# **4** Logging in to the ET-7200 Module

- 1) Enter the new IP for the ET-7200 as the URL in browser
- 2) Fill out the User name and Password "Admin" again
- 3) Welcome to ET-7200 web site