PIR-230-E Quick Start

Nov. 2016 Version 1.0.0

1

Package Contents



PIR-230-E Module



Mounting Plate




Quick Start




M4x12 Drywall Screws x 2


2

Wire Connections

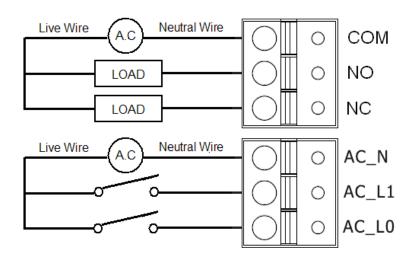

Installation

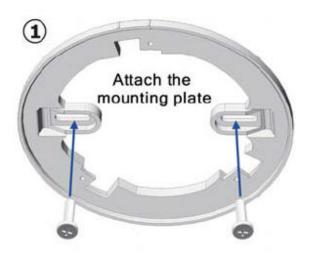

 



3 Turn the cover clockwise

 


4 Lock the cover in place








Switch Setting



Function		Switch Number and Setting									
		1	2	3	4	5	6	7	8	9	10
Protocol	Modbus	OFF									
	DCON	ON									
Configuration	Hardware		OFF								
	Software		ON								
Address	Low Node			OFF							
	High Node			ON							
Mode	Normal				OFF						
	INIT				ON						
PIR Operating	Dawn					OFF					
	Dust					ON					
Sensitivity	Maximum						OFF	OFF			
	High						OFF	ON			
	Low						ON	OFF			
	Minimum						ON	ON			
ON Time Control (Seconds)	6								OFF	OFF	OFF
	16								OFF	OFF	ON
	33								OFF	ON	OFF
	66								OFF	ON	ON
	131								ON	OFF	OFF
	262								ON	OFF	ON
	524								ON	ON	OFF
	1049								ON	ON	ON

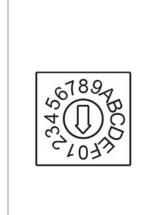

 

 

When **DIP3=OFF**

Rotary Switch 0 ~ F for Node Addresses 160~175 (Low Node Address)

When **DIP3=ON**

Rotary Switch 0 ~ F for Node Addresses 176~191 (High Node Address)



Technical Support

- User Manual and Utility
 http://ftp.icpdas.com/pub/cd/pir/PIR-230-E/pir-230-e_index.html
- Product Website
 http://www.icpdas.com/root/product/solutions/remote_io/rs-485/sensor_series/pir-230.html
- E-mail service@icpdas.com